
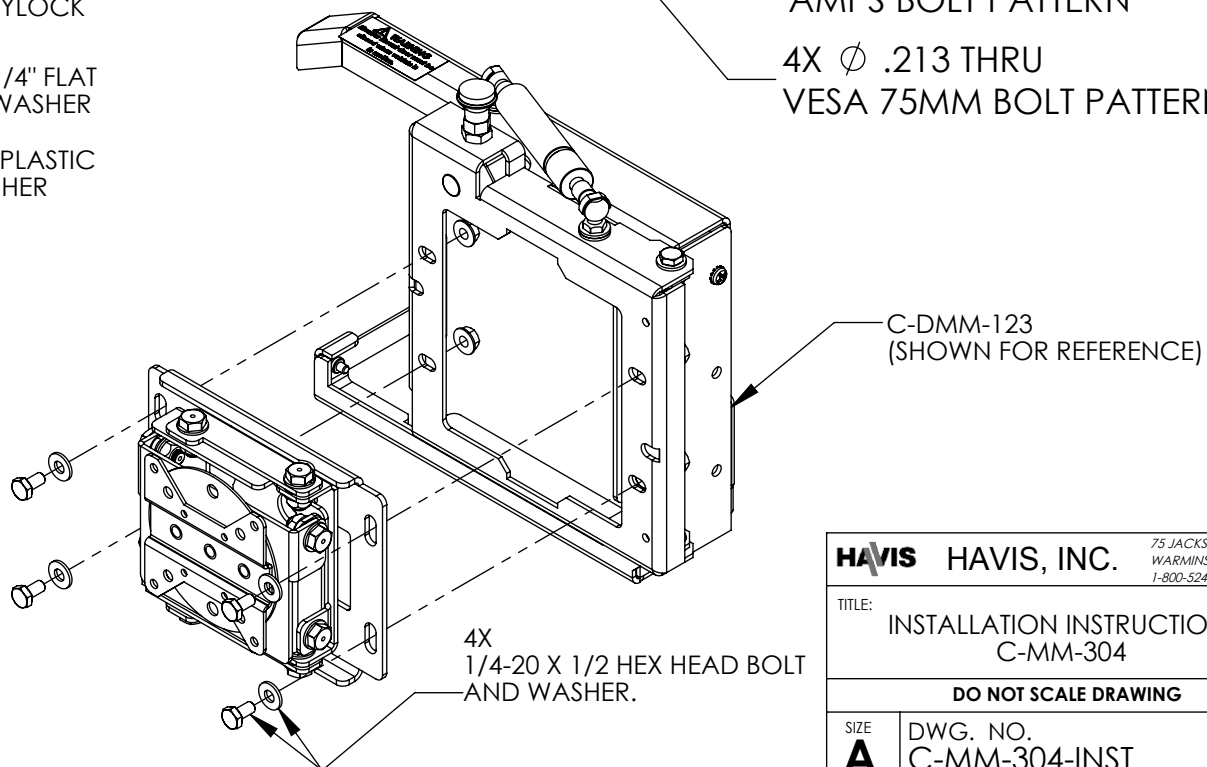
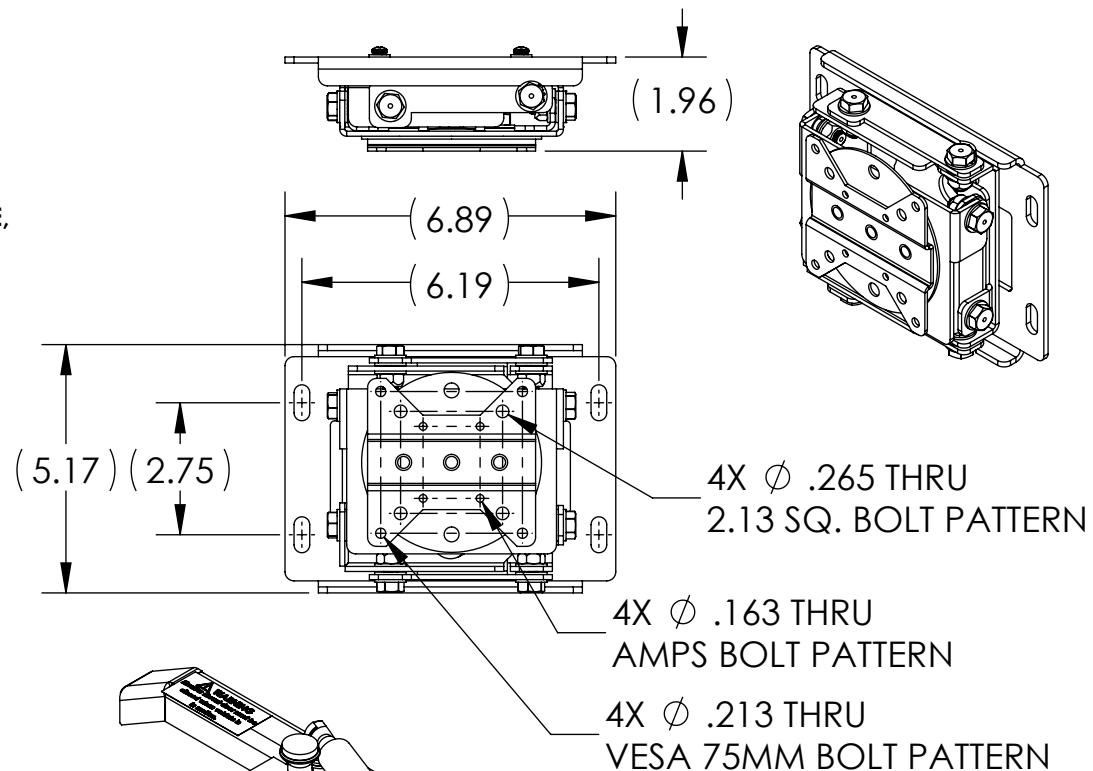


INSTALLATION:

1. REMOVE ORIGINAL TILT-SWIVEL FROM DMM DOOR.
2. INSTALL C-MD-208 USING THE ORIGINAL 1/4-20 HEX HEAD SCREWS, WASHERS AND FLANGED NUTS.
3. INSTALL EQUIPMENT TO ROTATING PLATE.

NOTE: MOUNTING HOLES MAY BE ACCESSED BY ROTATING THE PLATE, OR THE ROTATING PLATE MAY BE REMOVED FROM THE ASSEMBLY TO ALLOW EASIER INSTALLATION OF THE EQUIPMENT.

4. POSITION EQUIPMENT AS DESIRED.

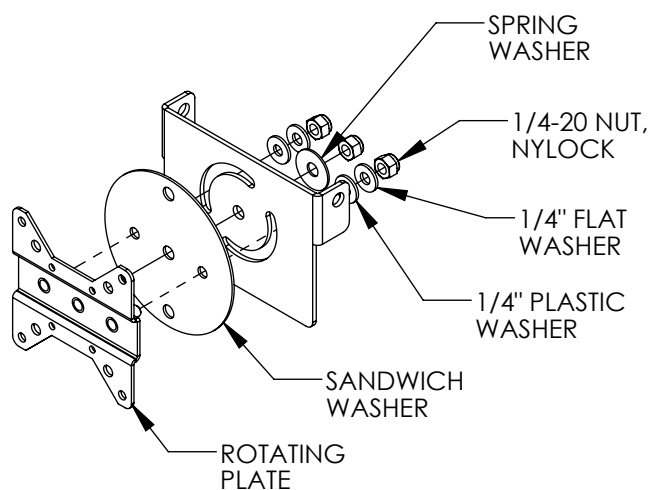

HAVIS HAVIS, INC.		75 JACKSONVILLE RD. WARMINSTER, PA. 18974 1-800-524-9900
TITLE: INSTALLATION INSTRUCTION, C-MM-304		
DO NOT SCALE DRAWING		
SIZE A	DWG. NO. C-MM-304-INST	REV 7-14
WEIGHT (LB): 0.78	SCALE: 1:4	SHEET 1 OF 1